

Table of Indexes

A

AF/AE, 24, 27, 75, 80, 91, 146
AFC, 81, 82
AFF, 81, 82
AFS, 81
Aperture, 5, 41, 44, 45, 92, 94, 95, 96,
98, 144, 147, 148, 195
Auto Focus Lock, 5, 91
Auto retouch, 5, 111
autofocus, 3, 8, 10, 12, 25, 26, 75, 77,
78, 80, 81, 82, 89, 102, 161
AVCHD, 4, 20, 21, 22, 25, 141, 142

B

Background defocus, 53, 55
battery, 11, 13, 16, 17, 18, 19, 84, 102,
145, 181, 186, 187, 198
Bokeh, 88
Burst Mode, 24, 25
burst rate, 89

C

Centre weighted, 74, 75
clock setting, 192
close up lenses, 157, 178, 180
continuous shooting, 89
Contrast, 106, 108, 110, 193
control dial, 11, 29, 46, 49, 53, 55, 60,
64, 66, 84, 85, 86, 92, 93, 94, 95, 96,
100, 108, 127, 143, 144, 147
creative filter, 64
Creative retouch, 5, 112, 113
Creative Video Mode, 5, 142, 143, 144
Crop Factor, 41
custom setups, 147

D

depth of field, 37, 42, 55, 59, 63, 84,
87, 89, 93, 94, 148, 149, 150
Disp Button, 27
DMW-LA7, 178
DMW-LT55E, 178
DOF, 37, 38, 45, 55, 59, 84, 87, 88, 94,
98, 148, 149, 150
dynamic range, 46, 52, 62, 127

E

EVF, 24, 25, 27, 28, 61, 130, 193, 198
Exposure Bracketing, 5, 127
exposure compensation, 49, 53, 54, 60,
64, 74, 75, 94, 95, 100, 127, 142
Exposure meter, 100, 197
Extended Optical Zoom, 103

F

Face detection, 5, 139
Flash, 5, 24, 25, 26, 130, 131, 133, 136,
168, 171, 172
Flash Hot Shoe, 24, 26
Focus button, 23, 26
Focus Tracking, 79, 80
forced flash, 133
Front Curtain, 134
f-stop, 41, 42, 96, 97, 98, 100
function buttons, 5, 88, 146, 193

H

Hand held Nite Shot, 51
HD movie, 33
HDMI, 27, 200
HDR, 52, 62, 63, 105, 127, 129
Histogram, 194

I

i.Dynamic, 5, 105, 147
i.Resolution, 5, 103, 105, 147
iA, 4, 7, 11, 12, 29, 46, 47, 48, 49, 51,
53, 56, 58, 64, 78, 92, 94, 130, 142, 143
Image Quality, 5, 34, 106
Image Size, 20, 33
ISO, 3, 4, 8, 10, 28, 35, 39, 40, 43, 44,
45, 51, 60, 63, 65, 92, 93, 95, 96, 97,
98, 99, 100, 105, 110, 125, 131, 144,
145, 147, 148, 152, 154, 170, 171, 173,
174, 183, 184

L

lens hood, 19, 20, 131
lithium-ion, 11, 16, 17

M

Manual Exposure, 5, 95
Manual Focus, 4, 23, 84, 85
Menu, 4, 6, 24, 28, 47, 86, 111, 112,
113, 192, 200, 201
metering, 10, 25, 54, 73, 74, 75, 92, 94,
95, 99, 127, 144, 147
MF assist, 85, 86, 198
Microphone, 27
mode dial, 11, 12, 29, 200
Motion Deblur, 51

N

Night portrait, 61
noise, 34, 39, 40, 43, 44, 45, 51, 60, 61,
62, 63, 98, 99, 109, 123, 124, 125, 126,
154, 181, 184, 186, 187
Noise reduction, 106, 108
NTSC, 20, 21, 22, 185, 200

O

optical image stabilisation, 44, 97, 150
output format, 185

P

P mode, 12, 92, 94, 95
PAL, 20, 21, 22, 185, 200
Panning, 60
Panorama, 59
photostyle, 40, 147
Power switch, 25
preset custom modes, 147
program shift, 93, 94

Q

Quick AF, 5, 102

R

RAW, 5, 14, 20, 34, 35, 70, 71, 72, 107,
117, 118, 123, 124, 125, 126, 190
Rear Curtain, 134

S

Saturation, 106, 108, 110, 193
Scene Modes, 4, 58
SDHC, 11, 13, 14, 15, 16, 69, 70, 71, 89,
90, 111, 112, 116, 189, 191, 197
self timer, 25, 26, 152
sensor, 2, 3, 29, 34, 35, 36, 37, 38, 39,
41, 42, 43, 71, 72, 73, 75, 76, 77, 78,
90, 92, 96, 97, 103, 106, 124, 155, 158,
169, 181
Sharpness, 106, 108, 110
Shutter Priority, 5, 95
Shutter release, 25, 144, 145
Shutter speed, 42, 45, 92, 95, 98, 147
Silkypix®, 34, 118, 122, 125
Single Area AF, 79
Soft focus, 66, 112
Spot Metering, 74, 75